• Push the power button to switch the i-stubble™ on.

USING THE TRIMMER WITHOUT THE COMB GUIDE

• Using without the comb guide is ideal for detailing/shaping and general tidying of edges.

• To detach the comb guide, gently hold the trimmer in one hand and with your thumb and index finger push up on each side of the comb guide (fig. 1). Flip the comb guide to the back of the unit and lock it into position by clicking it securely onto the fastener on the back of the handle (fig. 2).

• Switch the i-stubble™ on by pushing the "power on" button. The LCD will illuminate and the blades will start to move.

• If you are looking for an ultra close finish, you can use the trimmer without the comb guide. This will give you an extremely short cut.

IMPORTANT: please note when using the trimmer without the comb guide, the cutting length will be below 0.4mm. The length setting shown on the LCD screen will no longer be relevant when the comb guide is detached.

I-STUBBLE™ TOP TIPS

• Use on clean, dry hair.

• If possible, when using for the first time, try and grow your facial hair for a few days before cutting so you can trim down to a level that is best for you.

• Set the cutting length as required.

• It is always best to start cutting with a longer length first, then trim again if the length is longer than desired.

• Hold the i-stubble™ against the hair, the teeth of the comb guide should be pointing upwards and should be flat against the face.

• Move the trimmer upwards through the hair, a little at a time, against the direction of hair growth. The floating and contouring head will follow the curves of your face to ensure both accuracy and comfort.

• The i-stubble™ will work most effectively when cutting through the hair at its own speed – never force through the hair. You may experience a little resistance when trimming the neck area, where hair is thicker and grows in many different directions. This is completely normal.

• Just like shaving, extra time should be given when trimming under the neck area, as again this is where hairs grow in many different directions.

• Never switch the trimmer off while in the hair.

CLEANING & MAINTENANCE

• Regular cleaning will maintain the high performance of your i-stubble™.

• Switch off and remove the power cord if connected.

• Detach the comb guide by gently lifting the front of the comb guide from both sides and flipping it over to the back of the unit and locking it into position by clicking it securely onto the fastener on the back of the handle.

• Use the cleaning brush supplied to brush

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER – Any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. Unplug this appliance before cleaning.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not use while bathing or in a shower.
4. Do not place in, or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.
6. Except when charging, always unplug this appliance from electrical outlet immediately after using.
7. Never operate the adaptor if the specification is out of the rating.

DO NOT REACH INTO THE WATER

WARNING – To reduce the risk of burns, electric shock, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around appliance.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate this appliance.
4. Never operate this appliance if it has a damaged cord or plug, or if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening on this appliance.
7. Do not place appliance on any surface while it is operating.
8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades as injury may occur. Before use, make certain blades are aligned properly. (See “Care of your trimmers”).
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Never operate the appliance with the air openings blocks or while on a soft

away any hair and debris. Do not use a sharp object to clean the trimmer blade.

• The blades can be removed to aid cleaning.

• To remove the blades hold the handle of the i-stubble™ with one hand, place your thumb underneath the blades and push the blades away from the handle.

• Gently blow away any hair trapped beneath the blades.

• The blades can be rinsed under the tap. After rinsing the blades they may need to be oiled. See oiling instructions below.

• Ensure the blades are dry before reattaching to the trimmer body.

• Ensure you clean the blades after each use and before storing away.

• It is highly recommended to oil the blades from time to time with the oil provided. This ensures optimum cutting performance. For the first use you will need to use the oil supplied with the product, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil. To oil the blades ensure the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil onto the blades. Leave the unit on for a further few seconds to allow the oil to thoroughly spread the length of the blades. Switch off the unit and remove any excess oil by gently dabbing with a cloth.

NI-MH BATTERIES

This trimmer has Nickel-Metal Hydride batteries. In an effort to protect the environment, these batteries should be removed and properly disposed of when the unit is no longer operating. To remove the battery block

for disposal or recovery, follow these instructions:

1. First, unplug the trimmer. Remove the screws on the back.

2. Open the trimmer and remove the batteries using wire cutters.

3. To protect the environment, do not dispose of your batteries with your ordinary household waste. For more details on recovery of materials and waste treatment facilities, please contact the waste disposal services in your region.

CONTAINS NICKEL-METAL HYDRIDE BATTERY. MUST BE COLLECTED, RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE.

BATTERY REMOVAL INSTRUCTIONS

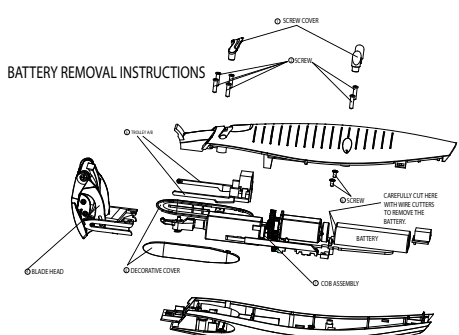

surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

11. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "OFF" then remove plug from outlet.

12. Avoid skin contact with moving blades.

13. When using the appliance with its cord, be mindful of tangles or kinks in the cord. If the cord does become tangled during use, turn the unit off and straighten cord before operating again.

14. Do not short the polarity (output cord), ensure jack is plugged into the unit before plugged the adaptor into outlet.

15. This power unit is intended to be correctly oriented in vertical or floor mount position.

16. Be sure voltage is in correct voltage before plugging in.

17. For connection to a supply not in North America, use an attachment plug adapter of the proper configuration for the power outlet.

18. The adaptor complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) the adaptor may not cause harmful interference, and

(2) the adaptor must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAVE THESE INSTRUCTIONS

USER MANUAL

Maintain your look, everyday with the next generation in stubble control technology.

The Conair For Men i-stubble™ has 15 ultra precise length settings, so you can maintain your preferred facial hair style at all times. Whether you're looking for a short shadow look, a longer stubble look, or even a short beard, the i-stubble™ is the ultimate in stubble control. The motorized length control gives precise adjustment from a 0.4mm shadow so you can get exactly the look you want. Its unique floating contouring head tracks the curves of your face for exceptional accuracy and comfort to give you an ultra precise stubble shave.

FEATURES

- Unique floating contouring head tracks the curves of your face for exceptional accuracy and comfort.
- Motorized length control from a 0.4mm shadow with precise automatic adjustments for ultimate accuracy.
- Advanced power performance with long-lasting dual battery system for reliable and fast stubble shaving.
- Advanced blade technology with electro-chemically sharpened blades for extreme sharpness and durability.
- LCD screen displays selected length and

LIMITED THREE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below that is nearest you, together with your purchase receipt and $7.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 36 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 36 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE:

CONAIR CONSUMER PRODUCTS INC.
100 Conair Parkway,
Woodbridge, Ontario
L4H 0L2
1-800-472-7606
Consumer Call Centre E-mail :
Consumer_Canada@Conair.com
©2011 CONAIR CONSUMER PRODUCTS INC.
www.conaircanada.ca

10CN118186

IB-10416

charge level.

• Protective comb guide delivers ultimate length consistency, removable for easy cleaning.

• Rapid charging system, 90 minute charge provides 45 minutes use or 5 minutes quick charge for a single stubble shave.

• Shaver-style power lead for convenient rechargeable or corded use in the bathroom.

• Ergonomic design with curved body for easy control and complete comfort in use.

INSTRUCTIONS FOR USE

CARE OF YOUR TRIMMER IMPORTANT : CHARGING

FIRST TIME USE

• The i-stubble™ is so easy to use, but before you do anything you must take your time to charge the unit for 16 hours before its first use. Even if you want to use it plugged in to your outlet, this initial super-charge ensures optimum power performance to give smooth fast trimming every time. After the first charge a full charge will only take 90 minutes. Maximum battery capacity will only be reached after 3 charging/discharging cycles.

• Connect the power adaptor to the socket on the underside of the i-stubble™ trimmer.

• Plug the power adaptor into a suitable bathroom outlet.

• Always check that the charging indicator on the LCD comes on when you connect the power lead into the product.

REGULAR CHARGING

• A full charge will take 90 minutes and will supply enough power for minimum 45 minutes continuous cordless use. The remaining battery life is shown on the LCD display.

• In order to maintain the optimum capacity of the rechargeable batteries, the appliance should be recharged for 16 hours every 3 months approximately.

• The i-stubble™ comes with a quick charge feature. A 5 minute charge will provide enough power for approximately 3 minutes use.

OPERATION WITH POWER CORD (NOT CORDLESS)

• Plug the power cord directly into the i-stubble™.

• Plug the power adaptor into a suitable bathroom outlet.

• Always ensure the i-stubble™ is switched off and unplugged after use, unless you intend to keep the i-stubble™ on charge.

SWITCHING ON

Press the ‘Power on/off’ button and release, the battery indicator on the LCD screen will cycle through a few times before the remaining battery life is displayed.

SWITCHING OFF

To switch off the i-stubble™ hold down the ‘Power on/off’ button for 2 seconds then release.

PREPARATION FOR USE

Always inspect the i-stubble™ before use to ensure the cutting head is free from hair and

i-stubble™

The ultimate in stubble control

Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions. Please call our TOLL-FREE customer service number at: 1-800-472-7606 or visit us online at www.conaircanada.ca

Model GMT900C
Instruction Booklet

CONAIR for men™/MD

debris and is running smoothly.

USING THE COMB GUIDE

The comb guide allows you to change the cutting length of your trimmer. You'll need to experiment to find your preferred length, but as a guide, 0.4mm will give you very short stubble, whilst 1.6mm will give you a longer stubble look. 2mm+ will give you a short beard.

- Ensure the comb guide is correctly positioned by pushing the comb guide gently downwards to secure into place.
- Use the digital touch control "up" or "down" buttons to adjust the telescopic comb guide to the required length.
- The cutting lengths are displayed on the LCD screen in "mm" – scroll through the available length settings with the digital touch controls.

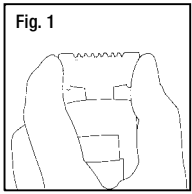

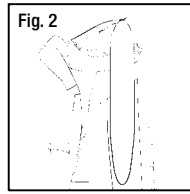

There are 15 length settings available: 0.4mm, 0.6, 0.8, 1.0, 1.2, 1.4, 1.6, 1.8, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0mm.

- Select your required length – the length setting will then remain displayed on the LCD screen.